

# VEHICLES FITTED WITH INJECTION LPG

## Points to remember when operating LPG with Gas Injection

- ✓ Changing fuel can be switched on the run
- ✓ Vehicles will always start on Petrol, switch to LPG at operating temperature
- ✓ Always keep a minimum  $\frac{1}{4}$  tank of petrol in tank at all times
- ✓ Run vehicle on Petrol once a week for approximately  $\frac{1}{2}$  hour duration
- ✓ Never rest your foot on accelerator pedal when starting
- ✓ When filling both LPG and Petrol for a trip, use Petrol for first 40km's, due to Petrol expansion
- ✓ First Service 1000km-1500km (free)

Metropolitan Autogas on Phone: 07 3256 0333

For Further information and assistance please contact Tanith or Scott