



Useful tips about Blanco ovens

The most common problem with Blanco ovens is that they don't get hot because of a faulty or broken fan forced heat element. Most people don't realise they can avoid this problem.

If water or oil splashes on the element (located in the back of the oven, around the fan) it can damage the element. It may also trip the fuse. Make sure if you are cooking with water or oil that can splash, to cover the food.

Some Blanco ovens have mesh on the back wall to protect the element, but this also blocks the airflow and should be used only when you cook food that can spill. Please make sure that you keep this mesh clean. It is clipped on the back so it is easy to remove and can be cleaned in the dishwasher.

Another common problem with Blanco ovens is that the clock flashes 000.00.00 and the oven doesn't turn on. This will happen after a power failure and you need to set the clock to make the oven work. (I know it does not make a sense but the power to the oven goes through the clock).

If you do not have power at all please check if a fuse has tripped in the fuse box. (The oven should have its own fuse so you will still have power to the rest of the house).

I hope these tips help you to look after your Blanco oven and save you money.

If you still have problems call Fix My Oven for further advice or to book a service call.

Thanks

Gadi

Fix My Oven