Thank you for buying a Unicycle from Weirder the Better

Please take your time when assembling your Unicycle, if you have any problems please contact us on 02 47829806 or www.weirderthebetter.com.au

In the box you should have the following:

- 1. Seat (saddle) with seat post attached.
- 2. Quick release seat post clamp.
- 3. Unicycle Frame.
- 4. Wheel with tyre and cranks attached.
- 5. Bearing Caps with nuts and bolts.
- 6. Pedals

Place the seat post into the frame, the front of the seat is the thinner end. Undo the nut and take one washer off the quick release clamp, insert into the holder (picture 2) and tighten by hand.

Push down on the leaver to tighten.

Pump up the tyre and you're ready to ride. Remember to Have Fun!

First take the wheel and look for the (R) on the inside of the crank (Picture 1) match it up with the pedals (R) and (L) and tighten them until firm.

Keep the (R) crank on your right hand side, place the frame onto the bearings. The back of the frame has a slit in it.



NOTE: Check one more time that the thinner part of the seat is facing forward.

Check the slit in the frame is on the back of the unicycle.

Check the left and right pedals are on the correct sides.



Attach the Bearing caps to the

frame using the nuts and bolts provided tighten until firm

be careful not to over tighten them.



Things to lookout for.

Loose Pedals: Tighten immediately Check the wheel is on the correct

Way. Loose Crank: Tighten

immediately as this can destroy the cranks or the hub.

Also watch out for lame jokes about having lost a wheel.

Please feel free to share this with your friends and family.